



TV Unit Capri 1550x2400x330 mm

ASSEMBLY INSTRUCTION

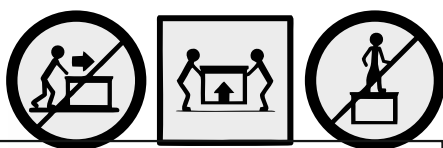

To avoid falling

we recommend fixing the product to the wall using **corners** or **double-sided tape**


Purchase separately.

Dimensions

Height: 1550 mm

Width: 2400 mm

Depth: 330 mm

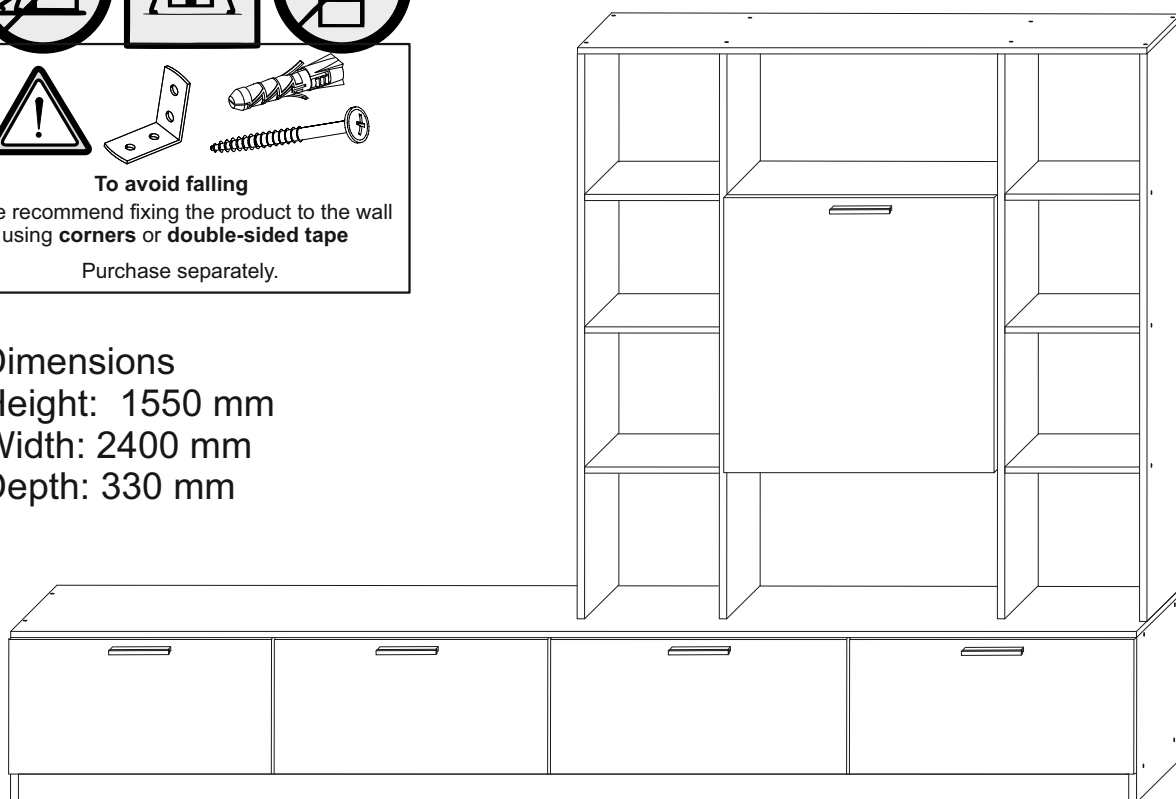

NOTE!

For all questions and complaints about this product, please contact the place of purchase of this product.






RULES FOR USE AND CARE OF FURNITURE

1. Use furniture only in dry rooms protected from the effects of weather conditions.
2. Install with suitable tools according to these assembly instructions.
3. Try to assemble as close to the location as possible.
4. The body is assembling in a horizontal position.
5. Before moving furniture, make sure that it is not loaded with items.




Caution: moving furniture may damage it.

When moving, hold on to vertical elements only; moving furniture by horizontal parts can break the product.


6. Overloading the furniture can damage it.
7. From time to time check the fittings and their correct position.
8. Wipe the furniture surface only with a slightly damp cloth or paper towels. Do not use chemical cleaning agents other than those specifically made for this.

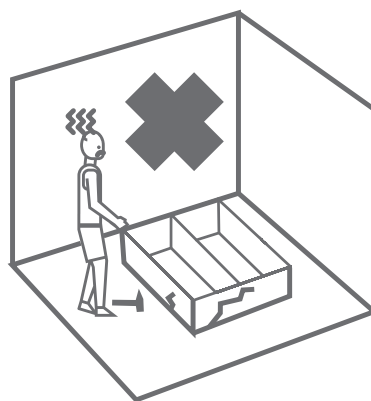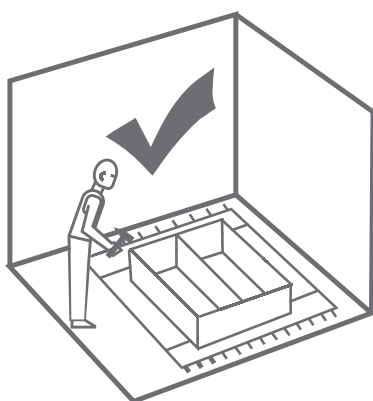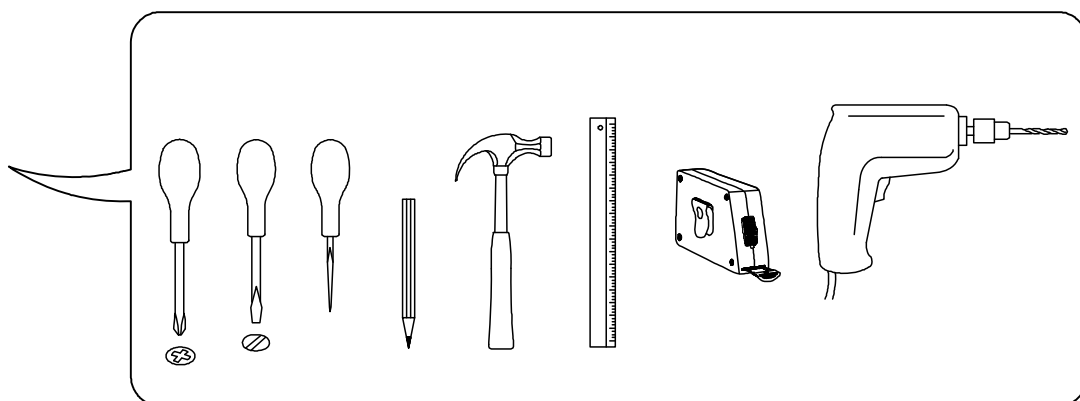

60-120 min

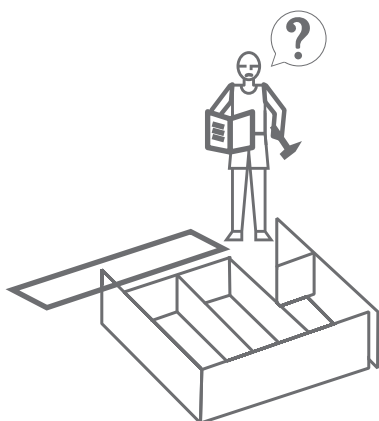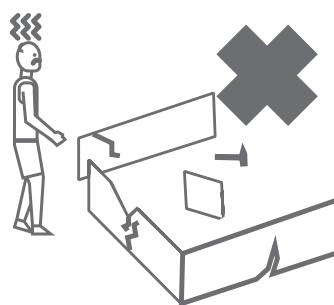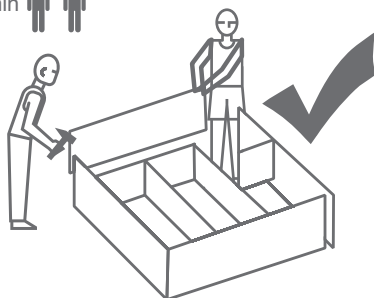



PARTS LIST

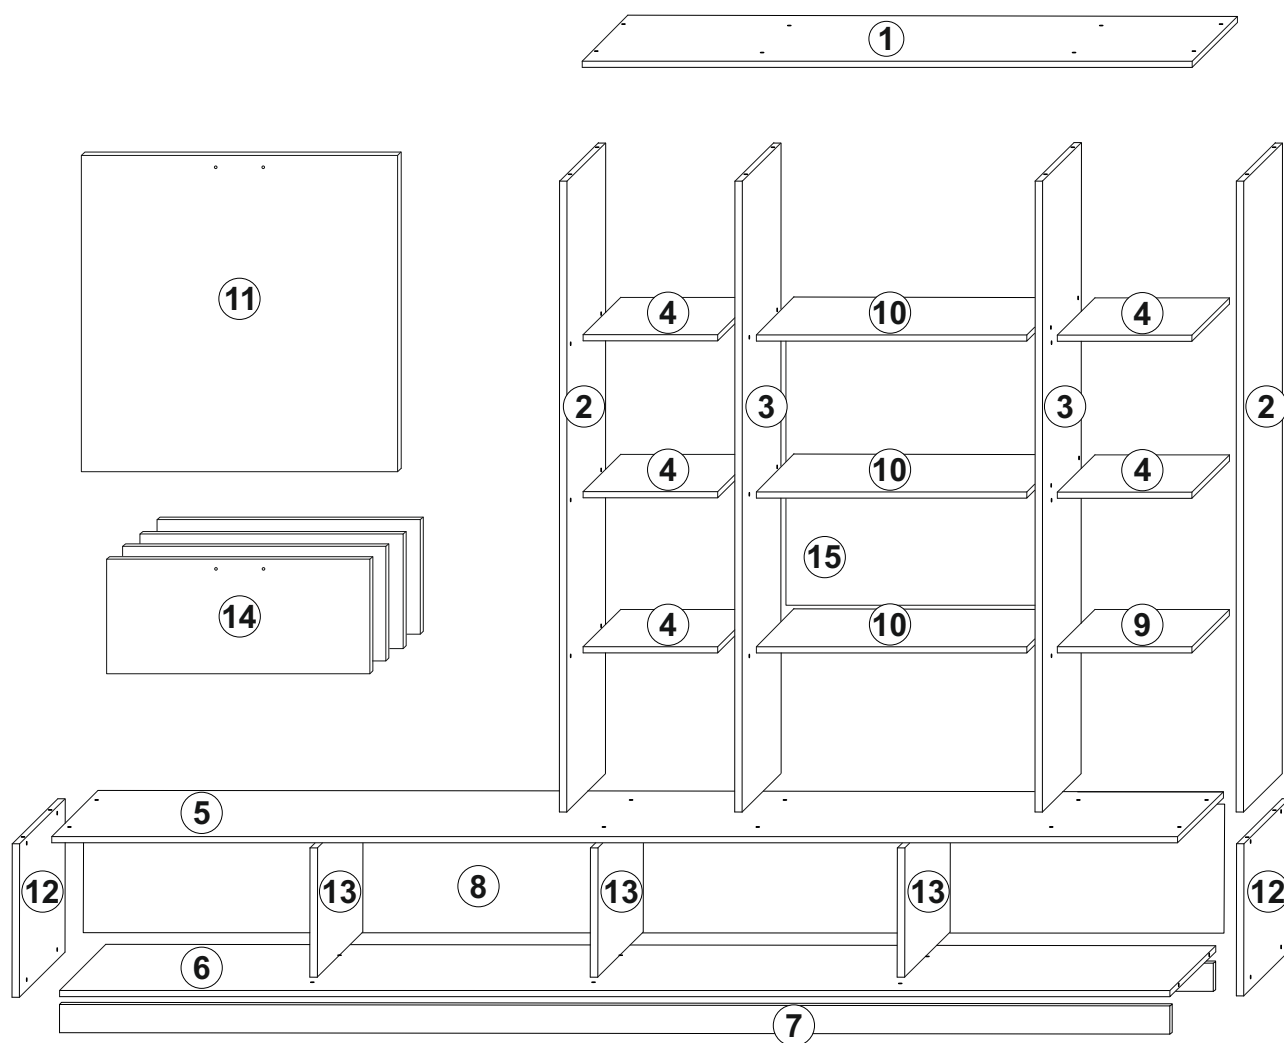



Nº	Description	Dimensions		Nº pack	Qty.	Nº	Description	Dimensions		Nº pack	Qty.
1	ROOF	1208	222	1/3	1	8	B.WALL	2396	268	1/3	1
2	S.STAND	1184	220	1/3	2	9	SHELF 2	278	220	2/3	1
3	IN.STAND	1184	220	1/3	2	10	SHELF 3	584	220	2/3	3
4	SHELF	278	220	1/3	5	11	FACADE	612	612	2/3	1
5	B.U.ROOF	2400	330	1/3	1	12	U.S.STAND	326	310	2/3	2
6	B.U.BOTTOM	2368	310	1/3	1	13	U.IN.STAND	240	310	2/3	3
7	A.BOTTOM	2368	70	1/3	2	14	FACADE 2	596	250	2/3	4
						16	B.WALL 2	612	612	2/3	1

Fittings:



1x z1	4x c3	10x d1	5x k1	10x φ15x12mm #16 r1
10x φ16 s1	10x c3	28x φ5x17 mm d1	8x k1	10x 20/9 r16
34x φ7x50 mm e32	12x φ16 s2	20x φ6,4x13 mm e3	70x φ3,5x16 mm p38	100x l1

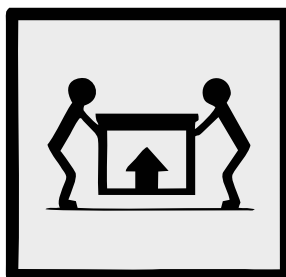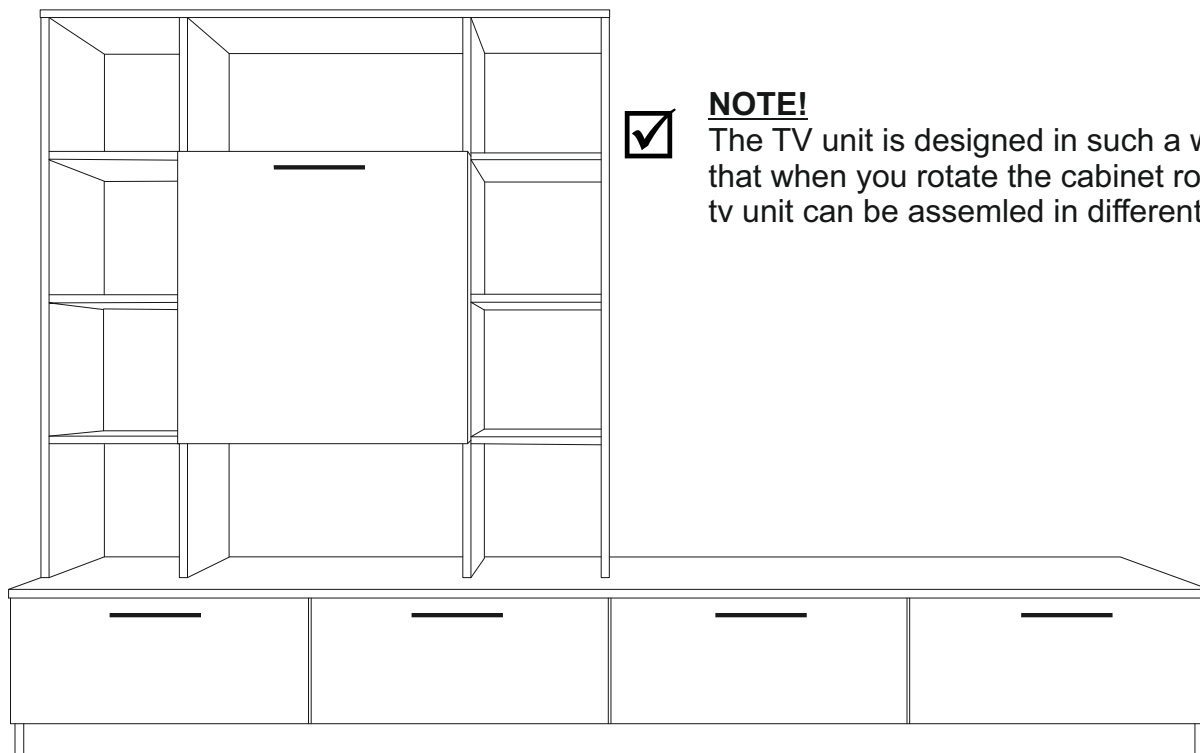



1

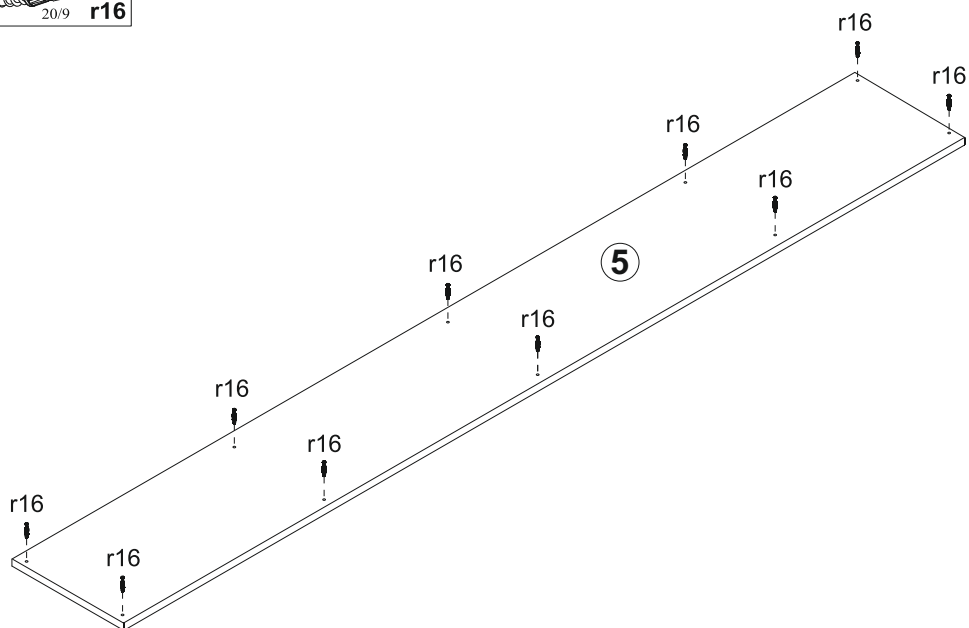





2

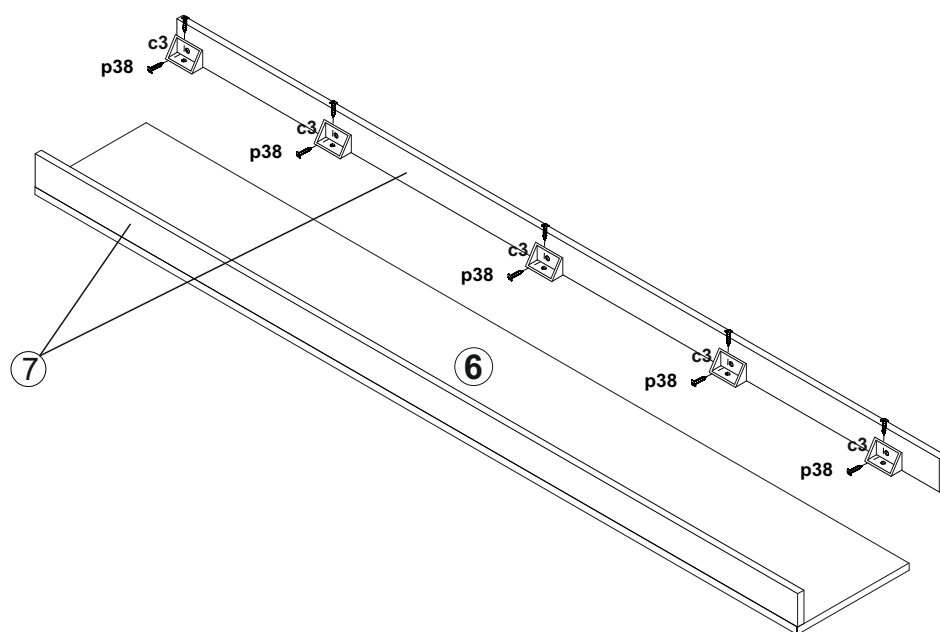


3

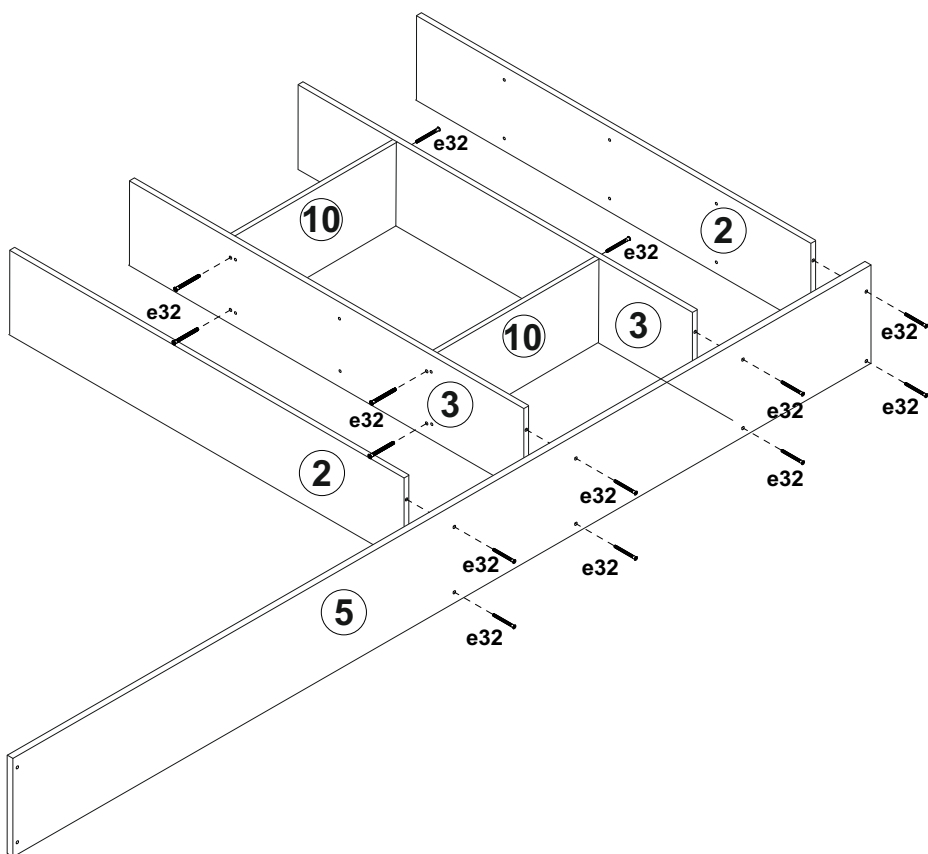

4

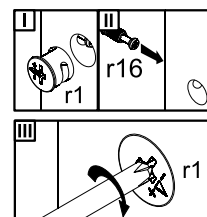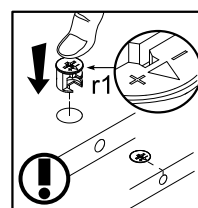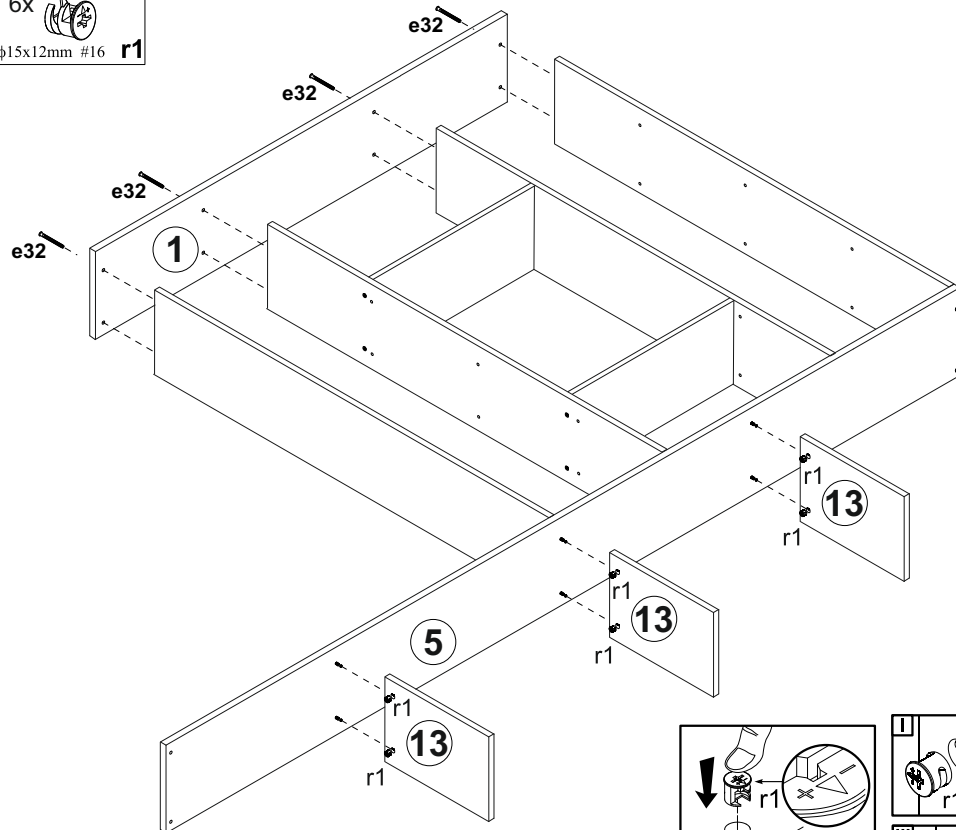

5


10x

 φ7x50 mm **e32**

4x



 φ15x12mm #16 **r1**

8x


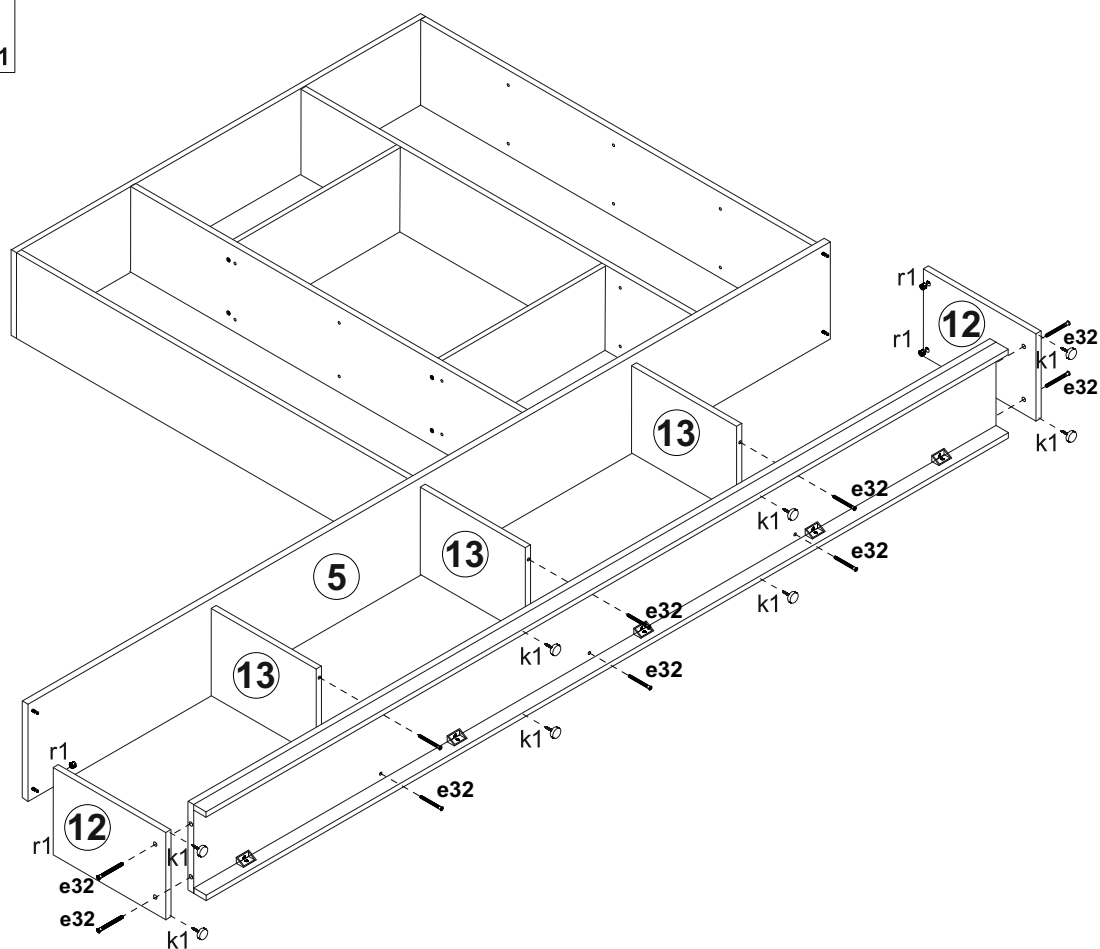
k1





6

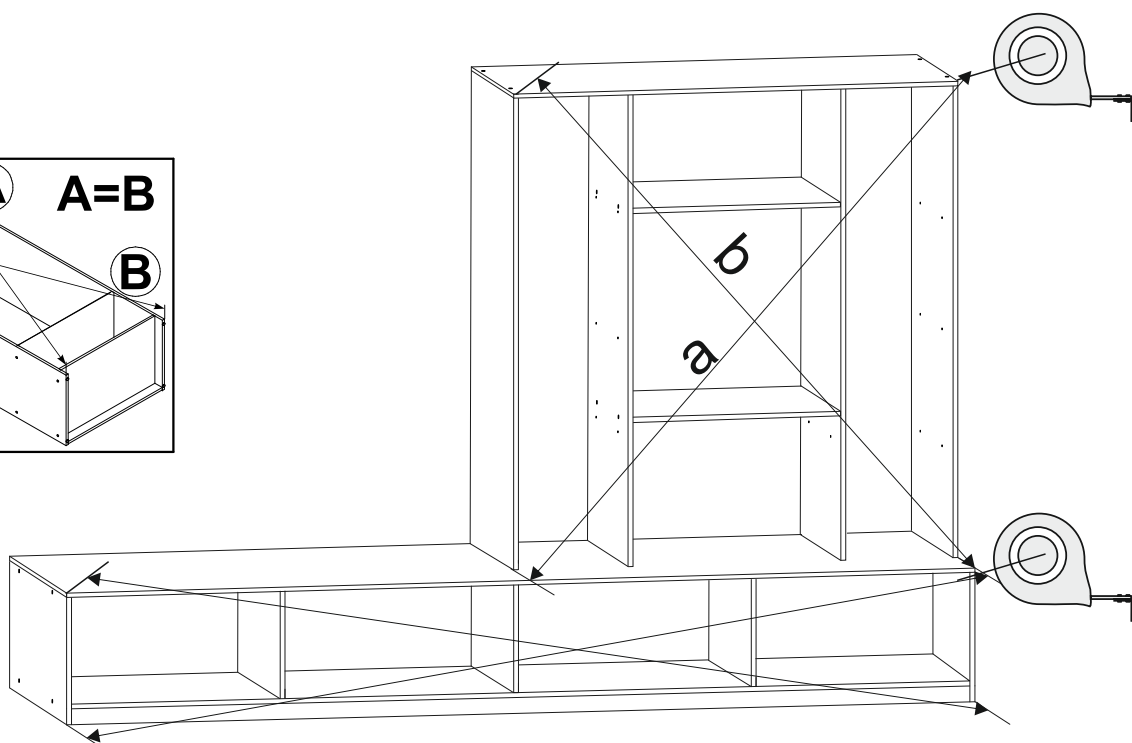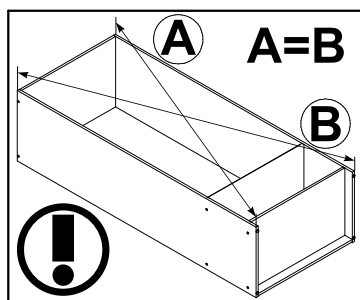



7

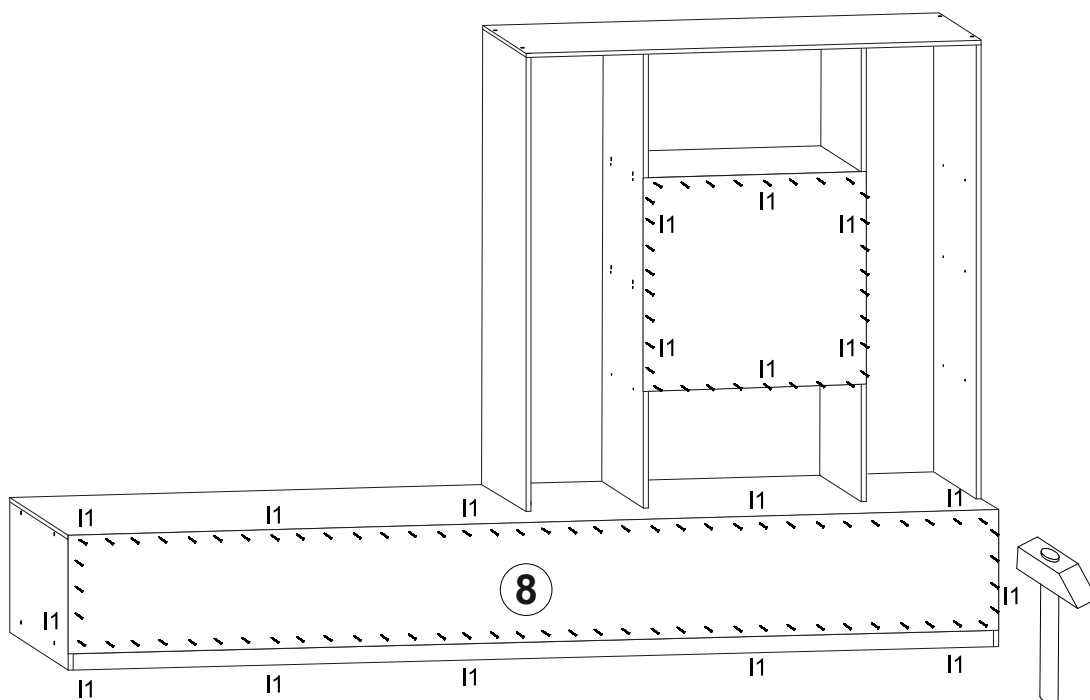

8

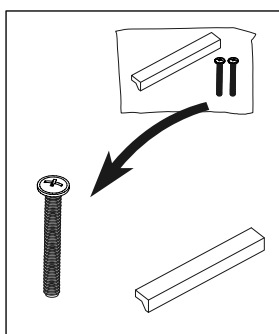


Place washers over the screws
to hold the handles securely.
Washers can be found in the hardware kit.

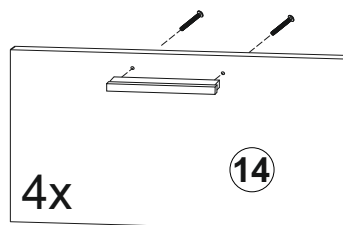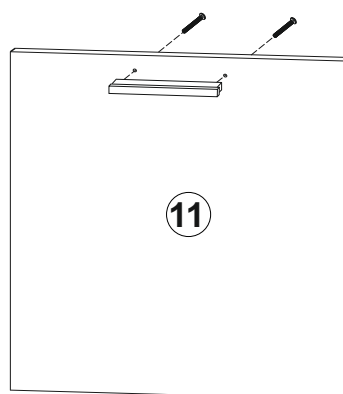





9

4x
 $\phi 3,5 \times 16$ mm **p38**

2x


4x
 $\phi 5 \times 17$ mm


4x
 $\phi 6 \times 13$ mm **e3**

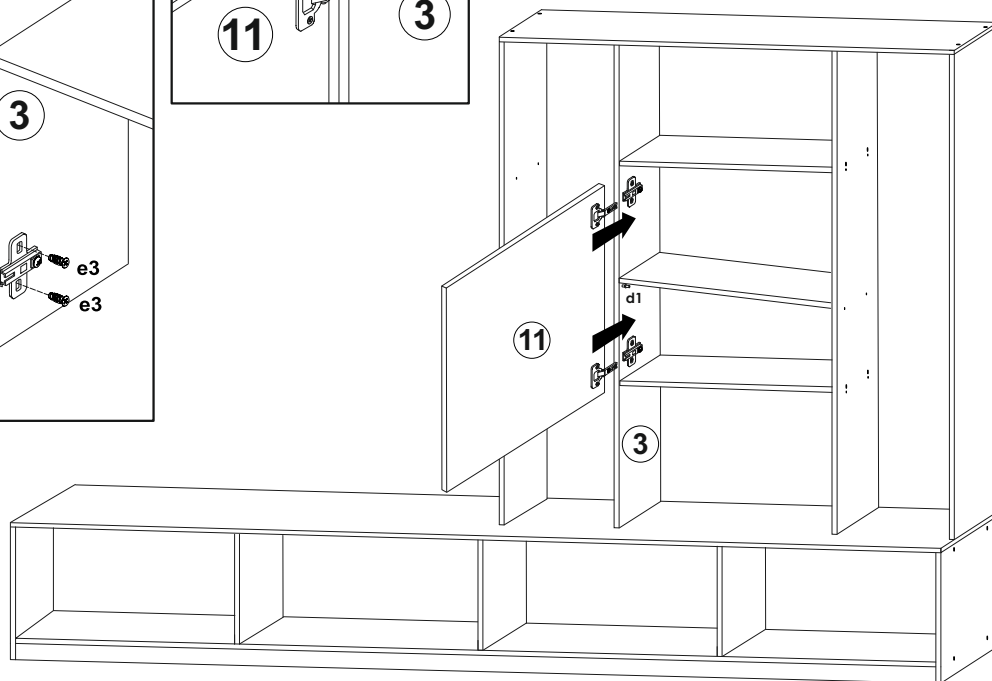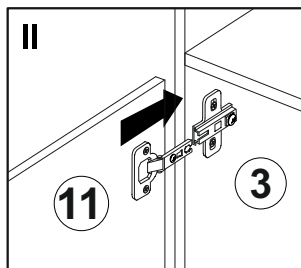
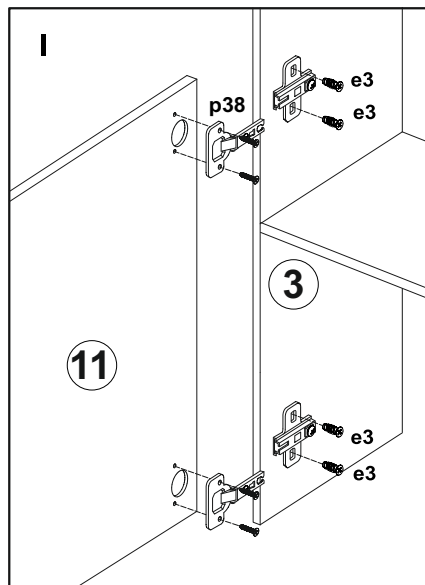
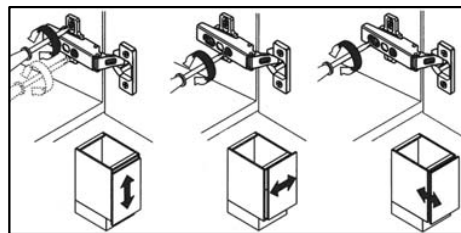


10






16x
 $\phi 3,5 \times 16$ mm **p38**

16x
 $\phi 6 \times 13$ mm **e3**

4x

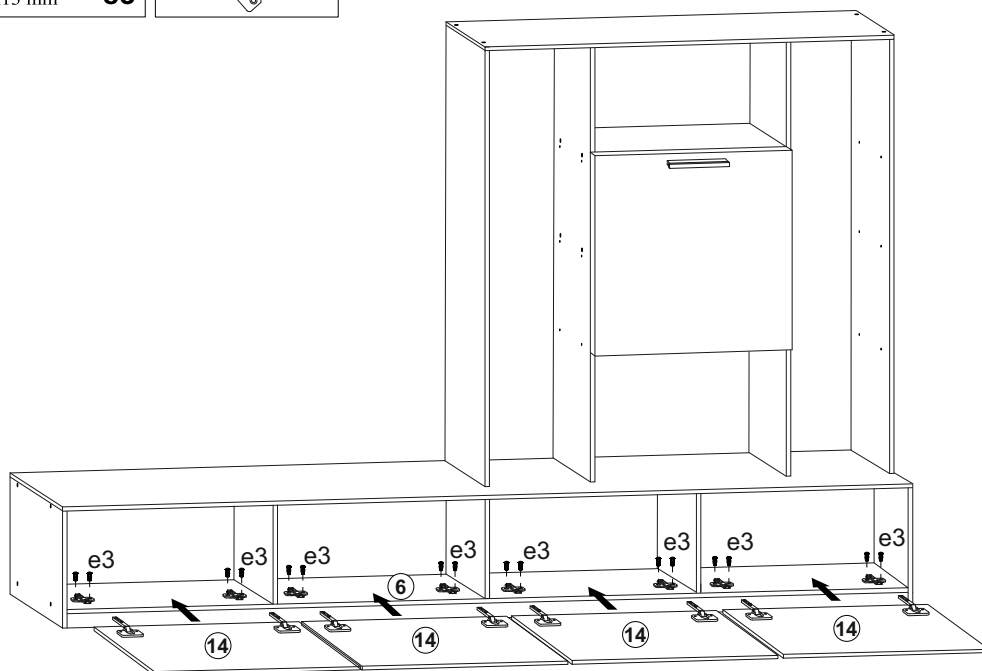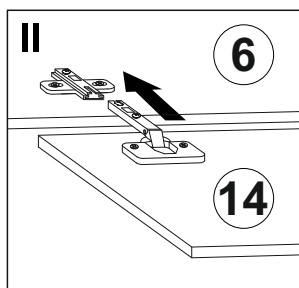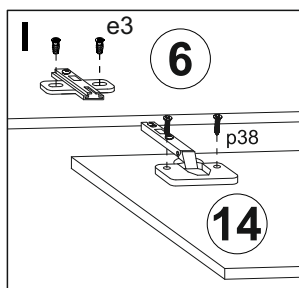


11

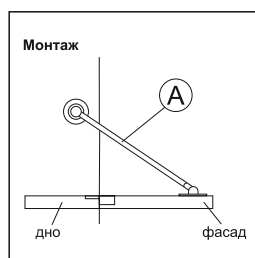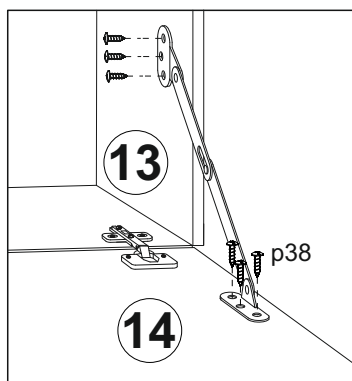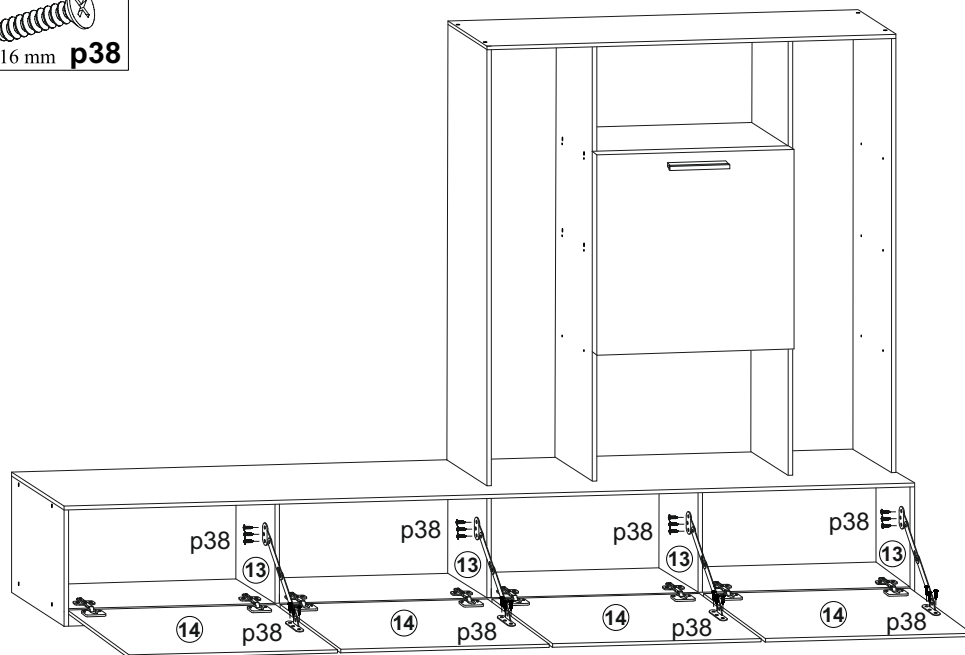

12

